


Instanta
DB600TFW
(WMS6TF)

D.110

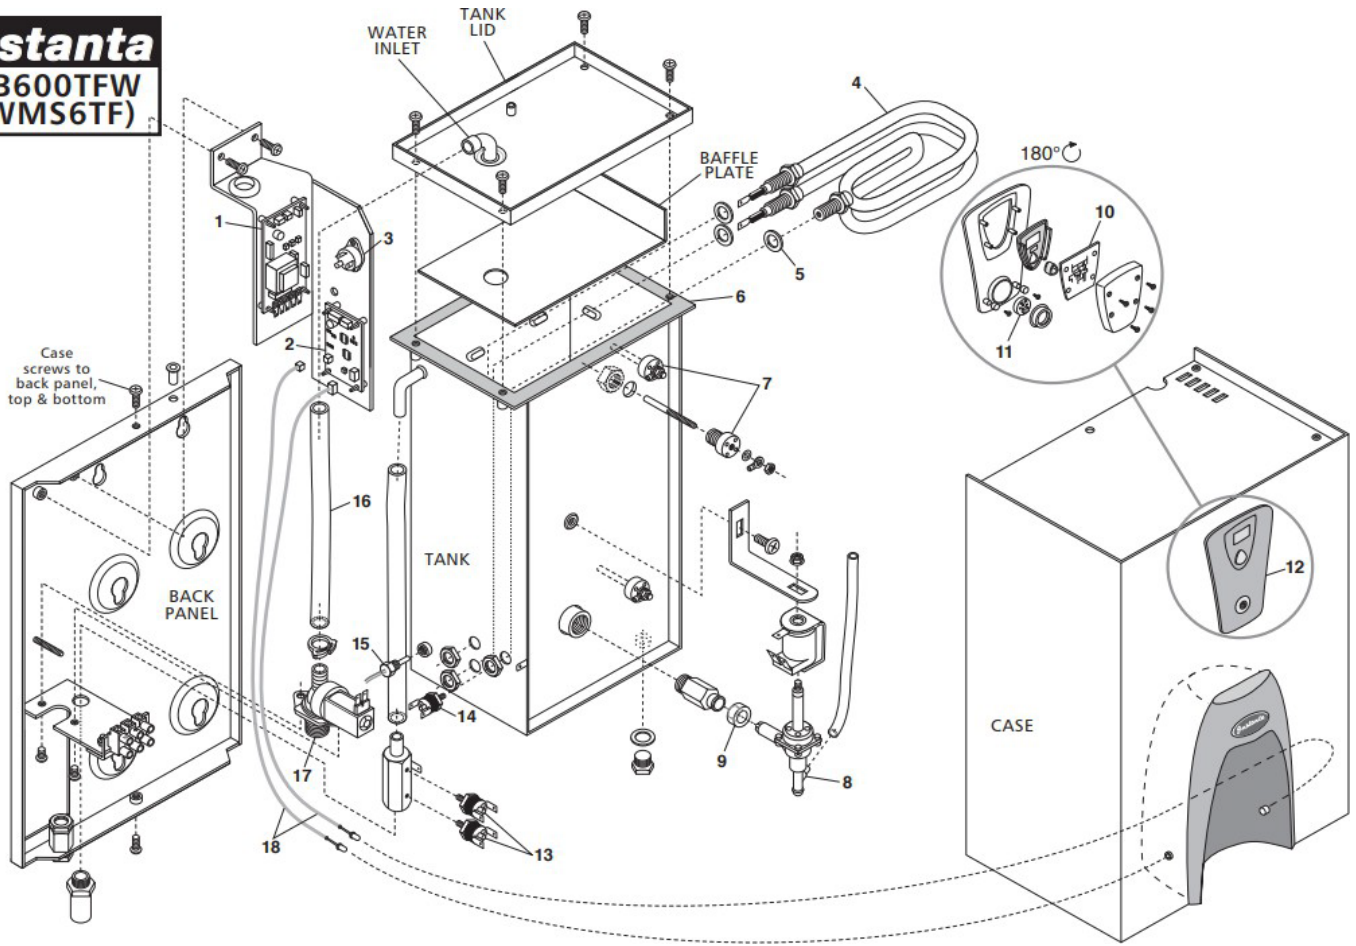

WMS6TF Exploded Diagram Key		
Number	Part Description	Part Code
1	Main P.C.B.	XEF402BSP
2	Sensor-beam-break P.C.B.	XEF406SP
3	Triac (3KW)	XE851SP
4	Element (3kW) c/w washers & hex nuts	XEN175SP
5	Separate element washers	XEN100WSP
6	Tank Gasket	WENPB6SP
7	Water level Probe assembly (3 per machine)	PRB12A
8	Hot Water Dispense valve	SOL24SP
9	Silicone rubber boot (for hot water valve)	SOL19WSP
10	P.C.B. LCD screen	XEF404SP
11	Sensor PCB c/w spacer	XEF407SP
12	Dark grey plastic facia	DBPLA2SP
13	Over-boil thermal safety cut-out	XETR7SP
14	Boil-dry element thermal cut-out	XETR5SP
15	Thermistor (Temp Sensor) Probe-type	XE853PRBSP
16	Silicone rubber water-feed pipe (grey) per metre	ACC309SSP
17	Inlet Solenoid Valve	SOL12SP
18	Beam-break cables (emitter/receiver set) - Long	XEF408SP
~	Spill-Tray kit c/w mounting bracket	DBSTIKIT